



Table of contents

	Page
Safety notes/ Technical support	2
Introduction	3
Technical data	4
Approvals	8
Options	9
Mounting	10
Electrical installation	13
Signal output	16
Sensitivity setting	16
Maintenance	17
Notes for use in Hazardous Locations	18
Assembly MN 4040	20
Disposal	23

Subject to technical change.We assume no liability for typing errors.All dimensions in mm (inch).Different variations than specified are possible.
Please contact our technical consultants.







Safety notes / Technical support

Notes

- Installation, maintenance and commissioning may be accomplished only by qualified technical personnel.
- The product must be used only in the manner outlined in this instruction manual.

Special attention must be paid to warnings and notes as follows:

	WARNING
\bigwedge	Relates to a caution symbol on the product: A failure to observe the necessary precautions can result in death, serious injury and/ or considerable material damage.
	WARNING
A	Relates to a caution symbol on the product: Risk of electric shock
	WARNING
ŀ	A failure to observe the necessary precautions can result in death, serious injury and/ or considerable material damage.
	This symbol is used, when there is no corresponding caution symbol on the product.
CAUTION	A failure to observe the necessary precautions can result in considerable material damage.
Safety symbols	
In manual and on product	Description

\bigwedge	CAUTION: refer to accompanying documents (manual) for details.
<u> </u>	Earth (ground) Terminal
	Protective Conductor Terminal

Technical support

Please contact your local supplier (for address see www.uwt.de). Otherwise you can contact:

UWT GmbH	Tel.: 0049 (0)831 57123-0
Westendstr. 5	Fax: 0049 (0)831 76879
D-87488 Betzigau	info@uwt.de
	www.uwt.de







Introduction

Applications

The device is used for level monitoring in all types of containers and silos.

It can be used with all powdery and granulated bulk materials with a densitiy greater than 20 g/l (1.25 lb/ft^3) that do not show a strong tendency to form crusts or deposits.

The units can be delivered with Ex-approvals for use in Dust Hazardous Areas.

A selection of fields of application:

- Building materials industry lime, moulding sand, etc.
- Food industry milk powder, flour, salt, etc.
- Plastics industry plastics granules etc.
- Timber industry
- Chemical industry
- Mechanical engineering

The Mononivo oscillating probe is normally screwed into the lateral container wall so that it is level with the filling height to be registered and monitored.

The device can also be mounted from the top of the container. In this case an extension piece is used to mount the probe level with the height to be registered.


The length of the probe can be up to 4 m (157") with an extension tube (MN 4030, MN 4040) .

The use of a sliding sleeve is recommended so that the switch point can be changed continuously during operation of the device.

Function

The piezo-electrically stimulated oscillating rod vibrates at its mechanical resonance frequency. If the probe is covered by the bulk material, the damping thus generated is registered electronically and a corresponding signal output is actuated.

The oscillation of the rod ensures a certain self-cleaning effect.

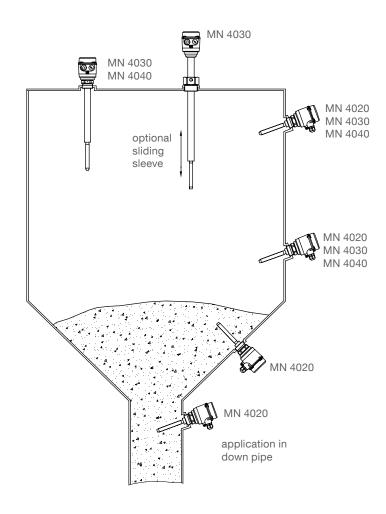




Level limit switch Series MN 4000 Technical Information / Instruction manual



Technical data

Dimensions

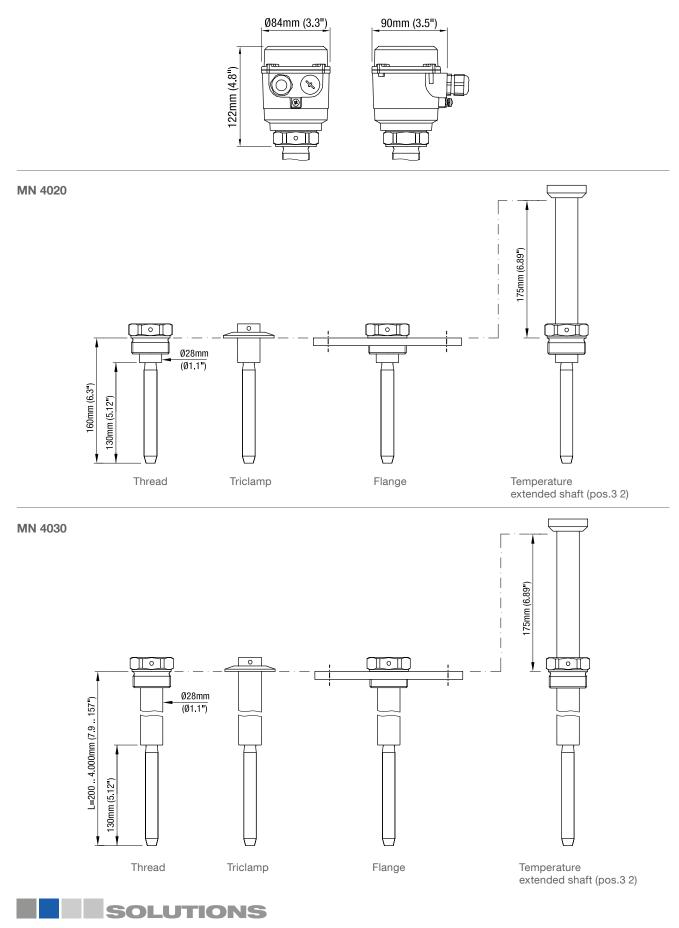






Technical data

MN 4040

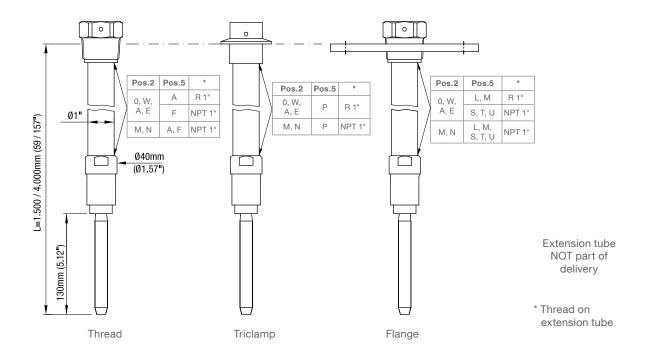







Technical data

Electrical data

Connection terminals	0.14 - 2.5 mm ² (AWG 26 - 14)			
Cable entry	M20 x 1.5 screwed cable gland NPT ½" conduit connection NPT ¾" conduit connection			
	Clamping range (diameter) of the factory provided cable glands: M20 x 1.5: 6 12 mm (0.24 0.47"")			
Signal delay	Sensor free -> covered ca. 1 sec Sensor covered -> free ca. 1 2 sec			
Safety operation (FSL,FSH)	Switchable for minimum or maximum safety	Switchable for minimum or maximum safety		
Vibration frequency	ca. 330 Hz			
Overvoltage category	II			
Pollution degree	2 (inside housing)			
Electronics	Universal voltage Relay DPDT	3-wire PNP		
Power supply	21 V 230 V 50 - 60 Hz ±10%* 22 V 45 V DC ±10%* *incl. ±10% of EN 61010	20 V 40 V DC ±10%* *incl. ±10% of EN 61010		
Max. ripple of power supply	7 V _{ss} at DC	7 V _{ss}		
Installed load/ input current	max. 22 VA/ 2 W	max. 0.5 A		
Signal output	Floating relay DPDT AC max. 250 V, 8 A non inductive DC max. 30 V, 5 A non inductive	Open Collector: Permanent load max. 0.4 A Short-circuit, overload and reverse polarity protected Output voltage equal to input voltage, drop <2.5 V		
Indicating light	Status of signal output by built-in LED	Status of signal output by built-in LED		
Isolation	Power supply to signal output: 2,225 Vrms Signal output to signal output: 2,225 Vrms	-		
Protection class	1	III		
Mechanical data	a			
Housing	Aluminium housing, powder coated RAL 5010 gentian blue Seal between housig and lid: NBR Seal between housing and process connection: NBR Nameplate: polyester film			
Degree of protection	IP67 (EN 60529), NEMA Type 4X			
Process connection	Material: MN 4020: stainless steel 1.4301 (304)/ 1.4541 (321)* or 1.4404 (316L) MN 4030/ 4040: stainless steel 1.4301 (304)/ 1.4541 (321)* or 1.4404 (316L) (process connection and tube extension) * The listed or higher-quality corrosion-resistant materials can be used. Filler materials are not listet. Filler materials are not listet. Thread: G 1", G 1¼", G 1½" DIN 228; NPT 1", NPT 1½" ANSI B 1.20.1 Flange: according to selection 1.4541 (321) or 1.4404 (316L) Triclamp: stainless steel 1.4301 (304) or 1.4404 (316L) 2" (DN50) ISO 2852 All material food grade			

SOLUTIONS





Technical data

Oscillator	Material: stainless steel 1.4404 (316L) (food grade)
Sound level	max. 50 dBA
Overall weight (ca.)	MN 4020: 1.3 kg (2.9 lbs) MN 4030: 1.3 kg (2.9 lbs) +1.3 kg/m (+2.9 lbs per 39.3") extension MN 4040: 1.8 kg (4.0 lbs) +1.3 kg/m (+2.9 lbs per 39.3") extension

Operating conditions

Ambient temp. (housing)	-40°C +60°C (-40 +140°F)		
Process temperature	$-40^{\circ}\text{C} +150^{\circ}\text{C} (-40 +302^{\circ}\text{F})$ (2) (3) (1) (9) (9) (9) (9) (9) (9) (9) (9) (9) (9		
Ventilation	For versions with Ex-approvals: see remarks on page 19.		
Min. powder density	Setting Min. powder density (ca.) I 20 g/l (1.25 lb/ft ³) II 80 g/l (5 lb/ft ³) III 150 g/l (9.4 lb/ft ³) IV 300 g/l (18.7 lb/ft ³)		
Features of bulk material	No strong tendency to cake or deposit		
Max. mechanical load	400 N (@40°C, 104°F) laterally (on oscillator rod) Recommended protection in case of high material load: mounting of an protective angle above the probe		
Max. mechanical torque	MN 4030: 180 Nm (@40°C, 104°F) MN 4040: 100 Nm (@40°C, 104°F)		
Max. process pressure	16 bar (232 psi)For versions with "sliding sleeve without process overpressure" (option pos.25 a,b,c): unpressurized.The max. process pressure may be reduced with use of flanges. Observe flange standards for pressure rating and pressure derating with higher temperature.For versions with Ex-approvals: see remarks on page 18.		
Vibration	1.5 (m/s ²) ² /Hz according to EN 60068-2-64		
Relative Humidity	0 - 100%, suitable for outdoor use		
Altitude	max. 2,000 m (6,562 ft)		
Expected product lifetime	Following parameters have a negative influence on the expected product lifetime: High ambient- and process temperature, corrosive environment, high vibration, high flow rate of abrassive bulk material passing the sensor element.		







Technical data / Approvals

Transport and Storage

Transport	Observe the instructions as stated on the transport packaging, otherwise the products may get damaged.
	Transport temperature: -40 +80°C (-40 +176°F) Transport humidity: 20 85%
	Transport incoming inspections must be caried out to check for possible transport damage.
Storage	Products must be stored at a dry and clean place. They must be protected from influence of corrosive environment, vibration and exposure to direct sunlight.
	Storage temperature: -40 +80°C (-40 +176°F) Storage humidity: 20 85%

Approvals

General Purpose (Ordinary Locations) Depending on selected version in price list.	CE EN 61010-1 (IEC/CB) FM/FMC TR-CU		
Hazardous Locations Depending on selected version in price list.	ATEX IEC-Ex FM/FMC TR-CU Detailed allocation	Dust explosion Dust explosion Dust explosion Dust explosion on of types and electronics to a	ATEX II 1/2 D Ex ta/tb IIIC T! Da/Db IEC-Ex ta/tb IIIC T! Da/Db Cl. II, III Div. 1 Gr. E,F,G Ex ta/tb IIIC T! Da/Db X pprovals: see selection list.
EMC	EN 61326 - A1		
Food grade material	According to directive 1935/2004/EC		
RoHS conform	According to directive 2011/65/EU		
Pressure Equipment Directive (2014/68/EU)	The units are not subject to this directive, because they are classified as "pressure-keeping equipment" and do not have a pressurized housing (see Art.1, Abs. 2.1.4). The units are designed and manufactured in accordance to the Pressure Equipment Directive. The unit is NOT intended for use as an "equipment part with safety function (Art.1, Abs. 2.1.3). If the units should be used as "equipment part with safety function" please contact the manufacturer.		



Level limit switch Series MN 4000 Technical Information / Instruction manual



Options

Weather protection cover	When the measuring device is used outdoor, the use of the weather protection cover is recommended. It protects the device from all atmospheric influences such as: • rain water • condensation of water • excessively high temperatures due to insulation • excessively low temperatures in winter
	Material: PE, weathering and temperature stable Not available for housing version d and de. A 100 mm (3.94")
	B 165 mm (6.5")
•	For use in Hazardous Locations: only permitted for Category 3 (zone 22) or Division 2.DIos min (0.37)C88 mm (3.46")
Sliding sleeve	VN 4030 G 1½" ISO 228 or 1½" NPT ANSI B 1.20.1 or flanges Material:1.4301 (304) or 1.4571 (316TI) Version with selection code pos.25 a,b,c: Orle forces likeling with the base areas and the selection code pos.25 a,b,c:
	Only for applications without process pressure, max. 150°C (302°F). Not available for Ex-approvals.
	Version with selection code pos.25 e,f,g: For applications with process pressure, max. 16bar (232psi), 150°C (302°F). Sealing material to the extension tube: viton or NBR
Mounting set	Screws and washers for fixing the unit on a flange.
Glass window in lid	To see the indicating light on the electronic from outside.
Control lamp	Bright indicating light (LED) seen from outside.
	Not available for use in Hazardous Locations and FM general purpose.
Plug 4-pole (incl. PE)	Used instead of cable gland.
	Not available for use in Hazardous Locations and FM general purpose.







Mounting

General Safety Instructions

Process pressure	Improper installation may result in loss of process pressure.	
Chemical resistance against the medium	Materials of construction are chosen based on their chemical compatibility (or inertness) for general purposes. For exposure to specific environments, check with chemical compatibility charts before installing.	
Temperature range	The range of the ambient and process temperature of the device must be observed (see page 6 and for Ex-approvals page 17)	
Mechanical load	The torque at the fastening spot must not exceed 180 Nm MN 4030/ 100 Nm MN 4040 Maximum length "L" in dependence on the deviation (in degrees) from vertical installation:	
	Max. deviation Max. length "L" 5° 4,000 mm (157.5") 45° 1,200 mm (47.24") >45° 600 mm (23.62")	
Mounting location	Keep distance to incoming material and to the silo wall. The installation has to be done in a way, that the sensor elements cannot hit the wall of the silo. The flow of the medium and fixtures in the container must be considered. This is especially important for extension length more than 3 m (118.1").	
Sliding sleeve	"Pressure tight" version (pos.25 e,f,g): Tighten both straining screws M8 with 20 Nm to obtain resistance against pressure.	
Flange mounting	A plastic sealing must be used to tighten the flange.	
Fastening of the threaded process connection	Mounting torque for the thread may not exceed 80 Nm. Use a 50 mm (1.97"), for units with sliding sleeve use a 55 mm (2.17"), open-end wrench. Do not fasten by turning the housing .	
Food grade material	The materials are available for the use under normal and predictable applications (according to directive 1935/2004 Art.3). Other conditions can influence the safety.	







Mounting

Additional Safety Instructions for Hazardous Locations

the aluminium enclosure and steel.

 Installation regulations
 For devices to use in hazardous locations the respectively valid installation regulations must be observed.

 Sparks
 The installation has to be done in a way mechanical friction or impact can not cause sparks between

Mounting instructions


Oscillating rod	Do not bend, shorten or extend the oscillating rod since this will destroy the device.		
Direction of the cable glands	When the unit is mounted from the side, ensure, that the cable glands faces downwards and are closed to avoid water penetration into the housing. The housing can be rotated against the threaded connection after mounting.		
Sealing	Seal the process thread with Teflon tape in case of process pressure		
Precaution for later dismounting/ Service	Grease the screws of the lid if corrosive atmosphere is present (e.g. close to sea)		
Switching point	Heavy bulk material -> the signal output switches when the oscillating rod is covered a few mm Light bulk material -> the signal output switches, when the oscillating rod is covered a few cm		







Mounting

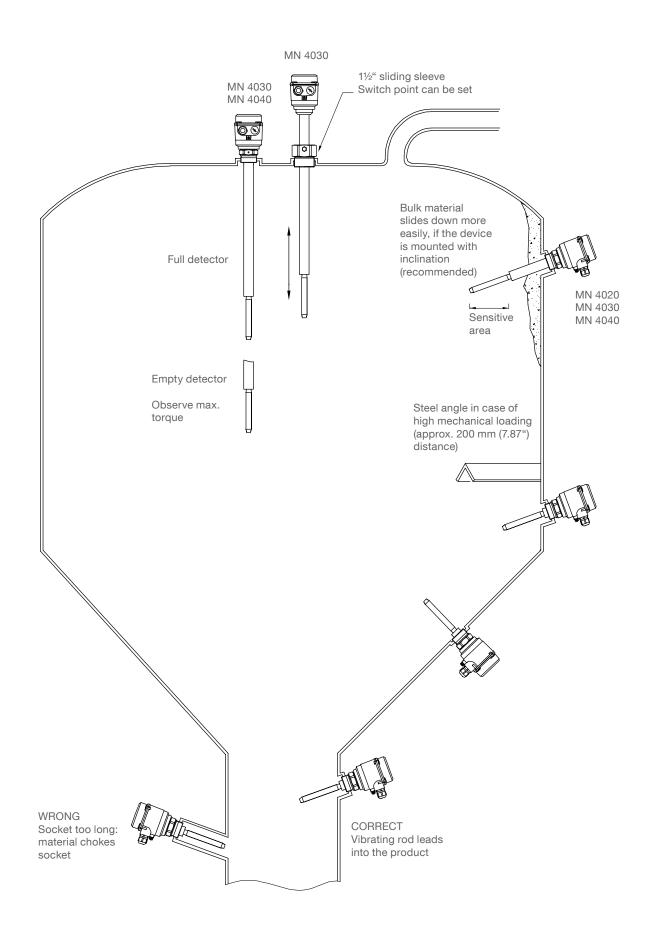







Electrical installation

General Safety Instructions

Handling	In the case of inexpert handling or handling malpractice the electric safety of the device cannot be guaranteed.		
Protective earthing	Before any electrical installation, the device must be connected to the protective earthing terminal inside the housing.		
Installation regulations	The local regulations or VDE 0100 (Regulations of German Electro technical Engineers) must be observed. With use of 24 V supply voltage, an approved power supply with reinforced insulation to mains is required.		
Fuse	Use a fuse as stated in the connection diagrams (page 15).		
RCCB protection	In the case of a defect, the distribution voltage must automatically be cut off by a RCCB protection switch so as to protect the user of the device from indirect contact with dangerous electric tensions.		
Power supply switch	A Power-supply-disconnecting switch must be provided and marked near the device.		
Wiring diagram	The electrical connections have to be made according to the wiring diagram.		
Supply voltage	Compare the supply voltage applied with the specifications given on the electronic and name plate before switching the device on.		
Cable gland/ closing element	The screwed cable gland and closing element must have following specifications: Ingress protection IP67, temperature range from -40°C to +70°C, UL or VDE certified (depending on the country where the unit is installed), pull relief. Make sure that the screwed cable gland safely seals the cable and that it is tight (danger of water intrusion). Cable glands that are not used have to be locked with a closing element.		
Conduit system	In case of using a conduit system (with NPT thread) instead of a cable gland the regulations of the country where the unit is installed must be observed. The conduit must have a tapered thread either NPT $\frac{1}{2}$ " or NPT $\frac{3}{4}$ " in accordance with the unit and ANSI B 1.20.1. Not used inlets must be closed tight with a metal closing element.		
Field wiring cables	 The diameter has to match to the clamping range of the used cable gland. The cross section has to match with the clamping range of the connection terminals and consider the max. current. All field wirings must have insulation suitable for at least 250 V AC. The temperature rating must be at least 90°C (194°F). If higher immunity interferences as specified in the stated EMC standards are present (see chapter approval), a shielded cable is required, otherwise an unshielded instrumentation cable is satisfactory. 		
Connecting the terminals	Make sure that max. 8 mm (0.31") of the pigtails are bared (danger of contact with live parts).		
Guiding the cables in the terminal box	Cut the field wiring cables to appropriate length to fit properly into the terminal box.		
Relay and transistor protection	Provide protection for relay contacts and output transistors to protect the device against spikes with inductive loads.		
Protection against static charging	The housing of the unit must be grounded in any case to avoid static charging of the unit on applications with pneumatic conveying and non-metallic containers .		



Level limit switch Series MN 4000 Technical Information / Instruction manual



Electrical installation

External equipotential bonding terminal Connect with equipotential bonding of the plant **Field wiring** A pull relief must be provided for the field wiring cables, when the device is installed with the factory provided cable glands. Cable glands and conduit Installation according to the regulations of the country, where the product is installed. system for ATEX/ IEC-Ex/ TR-CU Not used entries have to be closed with blanking elements certified for this purpose. Where available the factory provided parts must be used. A strain relief must be provided for the field wiring cables, when the device is installed with the factory provided cable glands. The diameter of the field wiring cable must match to the clamping range of the cable clamp. If other than the factory provided parts are used, following must be ensured: The parts must have an approval adequate to the approval of the level sensor (certificate and type of protection). The approved temperature range must be from the min. ambient temperature of the level sensor to the max. ambient temperature of the level sensor increased by 10 Kelvin. The parts must be mounted according to the instructions of the supplier. Conduit system In addition the regulations of the country must be observed. The used flameproof seals and blanking for FM elements must have an adequate type approval and a temperature range of at least -40°C (-40°F) to +80°C (176°F). In addition they shall be suitable for the conditions and correctly installed. Where available the provided original parts of the manufacturer must be used. Commissioning Commissioning only with closed lid. Opening the lid Before opening the lid take care, that no dust deposits or whirlings are present. Do not remove the lid (cover) while circuits are alive.

Additional Safety Instructions for Hazardous Locations








Electrical installation

Connection

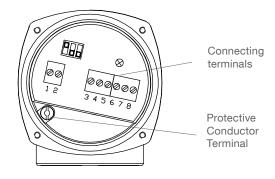

Universal voltage Relay DPDT

 Power supply:

 21 V.. 230 V 50 - 60Hz
 ±10%*
 22 VA

 22 V.. 45 V DC
 ±10%*
 2 W


 *incl. ±10% of EN 61010

Fuse on power supply: max. 10 A, fast or slow, HBC, 250 V

Signal output: Floating relay DPDT

AC max. 250 V, 8 A, non inductive DC max. 30 V, 5 A, non inductive

Fuse on signal output: max. 10 A, fast or slow, HBC, 250 V

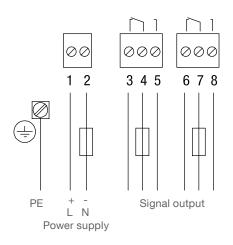


3-wire

Power supply: 20 .. 40 V DC ±10%* *incl. ±10% of EN 61010 Input current: max. 0.5 A

Fuse: max. 4 A, fast or slow, 250 V

Signal output: max. 0.4 A Output voltage equal to input voltage, drop <2.5 V

 Load for example: PLC, relay, contactor, bulb





Level limit switch Series MN 4000 Technical Information / Instruction manual





Signal output / Sensitivity setting

Signal output

FSL/ FSH Setting

- **FSH** If the sensor is used to indicate full load, set to Fail Safe High. Power failure or line break is regarded as "full" signal (protection against overcharging).
- **FSL** If the sensor is used to indicate empty load, set to Fail Safe Low. Power failure or line break is regarded as "empty" signal (protection against running dry).

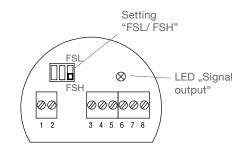

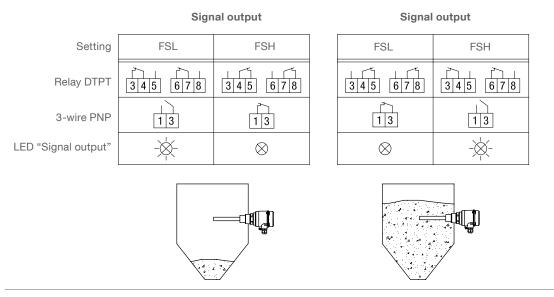

Sensitivity setting


All sensors are factory setted to position "III" to cover the majority of applications.

If the bulk material is heavy and has a strong tendency to cake or deposit, the setting can be set to position "IV" so as to decrease the sensitivity of the probe.

If the bulk material is light and has few or no tendency to cake or deposit, the setting can be set to position "II" or "I" so as to increase the sensitivity of the probe.

The table indicates the approximate min. bulk density depending on the settings.

Please contact manufacturer if you intend to use the device for special purposes.

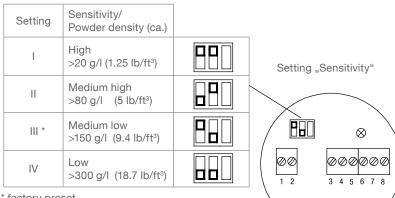

* factory preset

SOLUTIONS

Level limit switch Series MN 4000 Technical Information / Instruction manual




Maintenance

Opening the lid (cover)	 Before opening the lid for maintenance reasons observe following items: Do not remove the lid while circuits are alive. No dust deposits or whirlings are present. No rain can enter into the housing.
Frequent check of the unit	 To ensure durable safety in hazardous locations and with electrical safety, following items must be checked frequently depending on the application: Mechanical damage or corrosion of any components (housing side and sensor side) and of the field wiring cables. Thight sealing of the process connection, cable glands and enclosure lid. Properly connected external PE cable (if present).
Cleaning	 If cleaning is required by the application, following must be observed: Cleaning agent must comply with the materials of the unit (chemical resistance). Mainly the lid sealing, cable gland and the surface of the unit must be considered. The cleaning process must be done in a way, that: The cleaning agent cannot enter into the unit through the lid sealing or cable gland. No mechanical damage of the lid sealing, cable gland or other parts can happen.
	A possible accumulation of dust on the unit does not increase the maximum surface temperature and must therefore not be removed for purposes of maintaining the surface temperature in hazardous locations.
Function test	A frequent function test may be required depending on the application. Observe all relevant safety precautions related with a safe work depending on the application (e.g. hazardous locations, hazardous bulk material, electric safety, process pressure). This test does not proof if the sensor is sensitive enough to measure the material of the application. Function test is done by stopping the vibration of the vibrating rod with appropriate means and monitor if a correct change of the signal output from uncovered to covered happens.
Production date	The production date can be traced by the serial number on the typeplate. Please contact the manufacturer or your local distrubutor.
Spare parts	All available spare parts are stated in the selection list.

Change of the electronic board:

Deenergise device and secure against being switched on again.

- 1. Open the housing lid
- 2. Remove the field wiring cables/ plug
- 3. Unscrew the cover plate
- 4. Take out the electronic board and remove internal plug
- 5. Insert a new electronic board in reverse sequence
- 6. Connect the field wiring cables

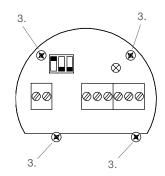





Notes for use in Hazardous Locations

Zone classification


	Usable in zone	ATEX category	IEC-Ex Equipement Protection Level (EPL)
Dust applications	20, 21, 22	1 D	Da
	21, 22	2 D	Db
	22	3 D*	Dc

* in case of conductive dust additional demands for the installation are possible.

General Notes

Marking	king Devices with EX approval are marked on the name plate.		
Process pressure	 Devices with Ex Approval are approved for atmospheric pressure. A detailed explanation is given below for ATEX and applies analogously for other Ex approvals: The scope of the ATEX directive is generally limited to atmospheric pressure, see ATEX directive 2014_34_EU Chapter 1 Art.2 (4). Atmospheric pressure is defined as absolute pressure 0.8bar to 1.1bar, see ATEX guideline §50 and IEC 60079-0 chapter 1 Scope. The technical background is that an explosive atmosphere which is compressed (overpressure) or released (underpressure) can exhibit different explosion behaviour than under atmospheric conditions. The standards for the types of protection against explosion (IEC 60079 series), on which a type approval according to the ATEX directive is based, are designed for atmospheric conditions and do not automatically cover deviating pressure conditions. Thus, an ATEX type approval issued in accordance with this directive only covers atmospheric pressure. This applies to all manufacturers. A deviating operating pressure can be assessed and approved by an expert for the respective application. Regardless of this, the design of the level indicators is suitable for a vessel overpressure / underpressure in accordance with the specified technical data. 		
Process and ambient temperature	The permitted temperature ranges are marked on the name plate. The max. permitted ambient and process temperatures (including temperature derating) stated in this manual must be observed.		

Permitted zones for mounting in partition wall

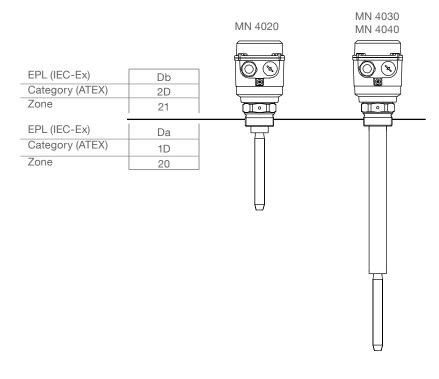



Level limit switch Series MN 4000 Technical Information / Instruction manual




Notes for use in Hazardous Locations

Max. Surface Temperature and Temperature Class

The temperature marking on the type plate \bigwedge refers to the instruction manual. In the following table the relevant temperature ratings are shown.

The maximum surface temperature (resp. temperature class) is the warmest temperature of the unit which could occur during malfunction (according to Ex-definition).

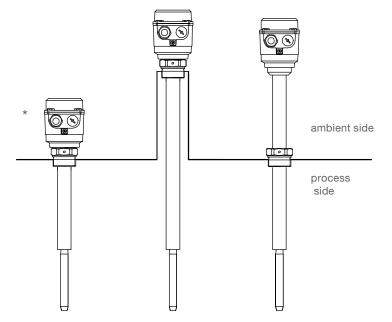

* Max ambient temperature is derated when process temperature exceeds 60°C (140°F), see (1) on page 7.

Max. ambient temperature	Max. process temperature	Max. surface temperature	Temperature class (Division System)	Temperature class (Zone System)
60°C (140°F)	120°C (248°F)	120°C (248°F)	T4	T4
	130°C (266°F)	130°C (266°F)	T4	T4
	140°C (284°F)	140°C (284°F)	T3C	Т3
	150°C (302°F)	150°C (302°F)	T3C	T3








Assembly MN 4040

Manufacturing of the Extension tube

	Obtain instruction manual for proper manufacturing of the extension tube. In case of deviation from the instruction manual the unit is not safe for use in Hazardous Locations.
Demands on the Extension tube	Material: Stainless steel 1.4301 (SS304) or 1.4305 (SS301) or 1.4571 (SS316Ti) or 1.4404 (SS316L)
	The tube must be manufactured from one single piece. It is not allowed to weld two or more pieces together.
	Carefully observe max. length, diameter, wall thickness, thread, tolerances as specified in the drawing.
	All sharp edges must be removed to protect the cable.
Thread testing	Each thread must be tested with go and no-go ring gauge according to standard EN 10226 (R 1" version) or ANSI B 1.20.1 (NPT 1" version)

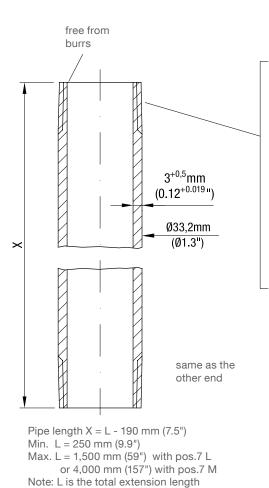

*Version with R 1" thread Thread R 1" EN 10226 Effective thread length: 14.5 .. 19.1 mm (0.57 .. 0.75") (dimension L1 according to standard EN 10226)

*Version with NPT 1" thread Thread 1" NPT ANSI B 1.20.1 Effective thread length: 17.3 +2mm (0.68 +0.08") (dimension L2 according to standard ANSI B 1.20.1)

*The thread on the Extension tube must be manufactured either with R 1" or 1" NPT. This is depending on the selected version in priceslist pos.2 and pos.5. Details see page 5.

In case of FM approved Units:

The MN 4040 extension tube is constructed using Industry Electrical conduit installed by Qualified personnel per NFPA 70 National Electrical Code.

In case of CSA approved Units:

The MN 4040 extension tube is constructed using Industry Electrical conduit installed by Qualified personnel per C22.1 Canadian Electrical Code.



Level limit switch Series MN 4000 Technical Information / Instruction manual



Assembly MN 4040

Assembly of the unit

1. Mounting of the Extension tube

The tube must be assembled very carefully

to ensure permanent sealing, electrical
 grounding and mechanical stability.
 Observe the follow mounting instructions.

Make sure that the thread of the extension tube and the thread of the screwed piece/ oscillating piece is the same type (do not mix R and NPT thread).

1.1. Feed the connecting wire through the 1" Extension tube and the screwed piece. Use a separate taut wire for easy working.


1.2. Screw the 1" Extension tube into the oscillating piece and the screwed piece.

Requirements for proper sealing and electrical grounding:

Sealing must satisfy IP67 or NEMA Type 4 at both sides of the extension tube. To reach this, the threads must be sealed with temperature resistant sealing for $150^{\circ}C$ ($302^{\circ}F$). Max. thickness of the sealing is 0.2 mm (0.008").


The threads must be fixed with 50 Nm.

Use a open-end wrench to attach the oscillating piece (do not use the oscillating rods).

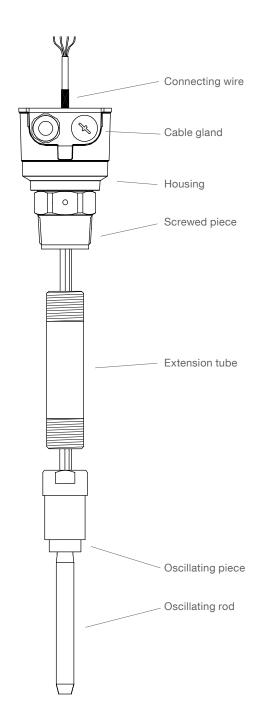

2. Checking the cable length

 Push back the cable into the extension tube until the stated length is present. Take care that no cable is winded up inside the housing. If the cables are too long to be pushed back, goto step 3, otherwise goto step 4.






Assembly MN 4040

3. Cutting the cables (if required)

If the cables are too long to be pushed back into the extension tube, shorten the cable to the length as stated in step 2. Prepare the cables as shown. Use the attached hoses and cable sleeves for proper mounting. Level limit switch **Series MN 4000** Technical Information / Instruction manual



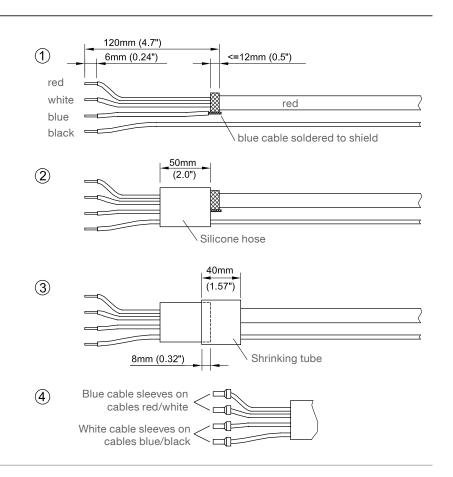


red , white

4. Connecting the plug


Observe correct sequence



Before fixing the cable tie observe correct cable length as stated and that no cable is winded up inside the housing.

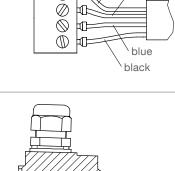

0

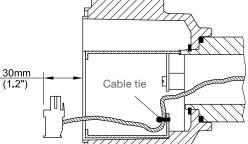

6. Insert electronics

Insert the plug into the electronic, insert the electronic into the housing and fix the electronic plastic cover with 4 screws.







Disposal

The product consists of materials which can be recycled, details of the used materials see chapter "Technical data - mechanical data".

Recycling must be done by a specialised recycling company.

